



Livestock Intelligence™



MSD

Animal Health



APR650 Reader

Quick Start Up Guide

The Allflex APR650 Reader is made to read livestock electronic identification Tags (EID) that offer simple-to-use essential reading and management capabilities and delivers outstanding value even for small farms.



Getting Started

Battery Charge

The device should be fully charged before the first use.

To charge, use the provided Magnetic-USB power source.

Connecting the USB cable:

The magnetized connectors “find” the proper orientation almost automatically by attracting each other in the appropriate order.



Note: DO NOT FORCE a connection to the reader. If it does not insert smoothly, verify that it is correctly oriented.

Charging is complete if no bars are flashing anymore



To disconnect, pull the connector away from the device

When fully charged, the battery info will show ‘100%,’ and you can see a rough estimation for operating time in Standby Mode and continuous Read Mode

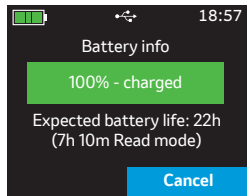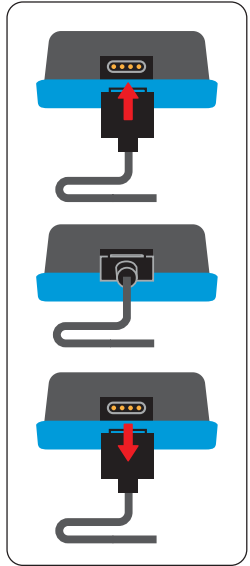



Initial Configuration

Set Language:

The default display language will be English at first start-up. You can change the language by accessing the menu, going to "setup," and choosing "set language." Navigating the options using the direction keys, you can then select your language preference by pressing ENTER.

Set Read mode:

By default, the reader is set to 'Single Read' - one scan click per animal. Choosing the 'Continuous mode' enables batch reading.

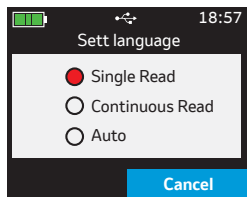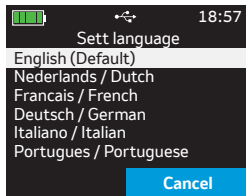

Device Properties

Multi-Color Status Led

The color changes according to the charging status when the display is switched off

- Flashing - Charging
- Solid - Fully Charged

Blue Status Led

Used to indicate the connection status when the display is switched off

- Flashing every 3 seconds - SD Card Mode
- Flashing once a second - Suspend Mode (CDC)

2D Barcode scanner

A Large 2.4-inch Color Display

Easily Controlled Ergonomic Keypad

Directional pad with an ENTER key and two soft keys for multiple functions

12 Alphanumeric Keys for convenient data entry

Magnetic UBS Connector



Display

Battery Status Indicator

 
Shows the approximate battery level. It also displays battery faults, such as high temperature.

USB connection

Indicates when the reader is connected via USB

Clock

Clock time in 24-hour mode

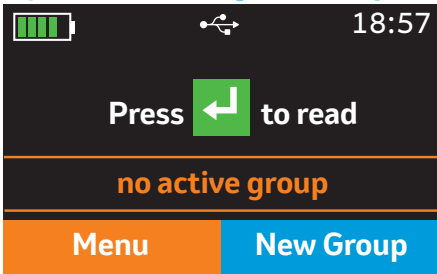

Left Soft-Key

Performs various functions depending on the associated screen display

Right Soft-Key

Performs various functions depending on the associated screen display

Keypad

Left Soft-Key


Power On/
ENTER Key

Right Soft-Key

Direction Keys


For navigation,
scrolling, and
character selection
in input fields

Alphanumeric Keys for data entry

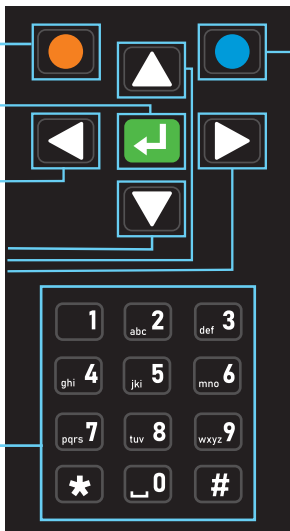


NOTE: Press the down button key for >2 seconds to switch off the device

Quick Reading Steps

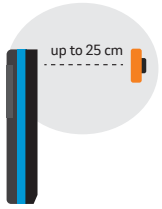


Reading EID Tags:

1. Press ENTER to Read
2. Scan the EID tag near the field lines of the reader
3. The device's RGB LED signal will turn on, as well as the signalization motors (sound and vibration)

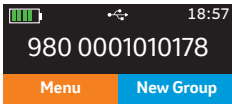

4. The tag will be shown on the display screen when successfully read

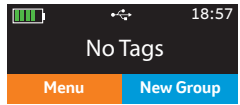


5. A 'No Tag' message will appear on the screen if the reading fails

Assigning Tags:

1. At the home display, press the New Group button
2. Insert Group Name using the direction keys to navigate the letters, numbers, or symbols
3. When finished, press 'Close' to exit the keyboard, and confirm the name by pressing ENTER.
4. To assign tags to the group created, enter the group and start reading.


NOTE: After 10.000 records within one group, the device will force the user to create a new group

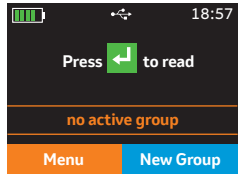

Barcode Reading:


1. Press the [Triangle] Button from the home screen to start Barcode scanning.
2. Scanning is active for 10 seconds Max., and an animation will appear on the screen.
3. The reader will project a Blue aiming feature that should be placed over the tag Barcode for a successful reading.
4. When scanned, the reader will display the content of the Barcode.

NOTE: The Join Data functions provide different possibilities for linking the Barcode to the EID

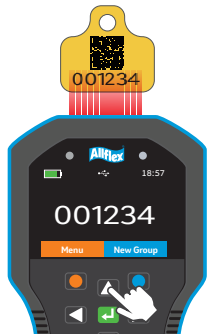

What is in the Box

ATB400 - Transport box

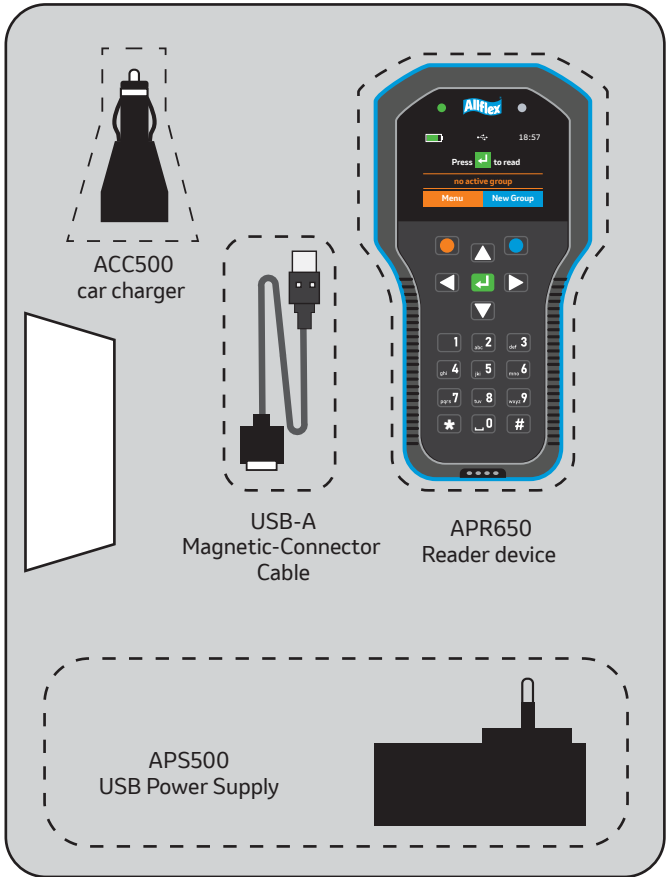

For more information visit
[Allflex APR 650 Product Support Page](#)

